

QUEBEC



NON-DIRECTIONAL HOMOGENEOUS

# QUEBEC

COMMERCIAL HOMOGENEOUS VINYL FLOORING





# QUEBEC

Non-directional Homogeneous Vinyl Sheet Flooring



7201



7202



7203



7204



7205



7206



7207



7208



7209 **In Stock**




7210




# QUEBEC

Non-directional Homogeneous Vinyl Sheet Flooring

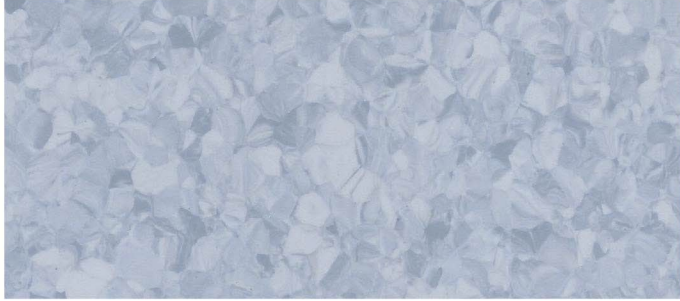

7211 In Stock

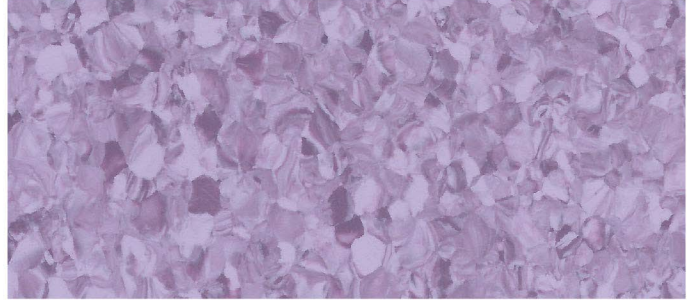

7212



7213



7214



## Pre-installation

*The installation should be carried out in accordance with local standards.*

1. Make sure the sub-floor is smooth, hard, clean and dry prior to installation.
2. The sub-floor should incorporate an effective damp proof membrane.
3. Open the package, put the flooring on the ground stack one layer by one layer.
4. The material must be allowed to acclimatize 24 hours before installation and the room temperature needs to be between 18-24°C.

## Maintenance


Cifors Quebec Homogeneous Vinyl Flooring Sheet incorporate a polyurethane reinforcement, which protects the flooring from resisting soiling and scuffing. Combined with the superior closed surface finish, this enhanced protection allows the use of a polish-free maintenance regime. This protection ensures that the intensity of the maintenance and overall cleaning costs are significantly reduced.

1. Clean the flooring regularly, as this is more cost-effective and hygienic than occasional heavy-duty cleaning.
2. Always follow dosage instructions carefully.
3. Wipe up any grease and spilt oil immediately, as they may damage the surface.
4. Resilient floors are damaged by solvents.
5. Black rubber wheels and rubber feet can discolor the flooring. All chair and table legs should have good quality floor protectors. Felt pads are not recommended in commercial interiors. Hard plastic is preferred.
6. Remember that light colors need more frequent cleaning.




# QUEBEC


*Non-directional Homogeneous Vinyl Sheet Flooring*

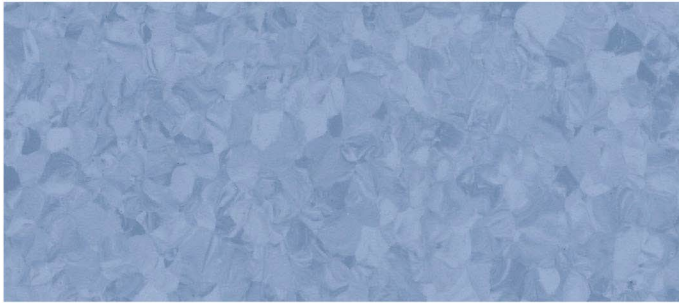

7215

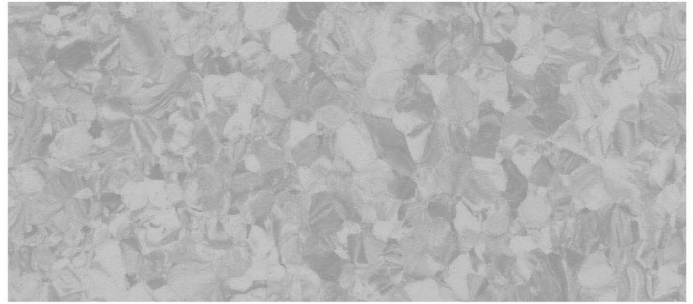


7216 **In Stock**

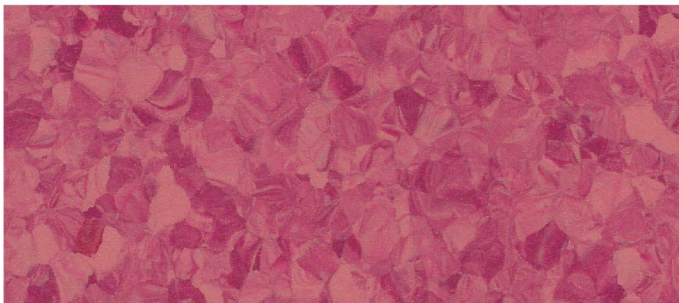


7217




7218

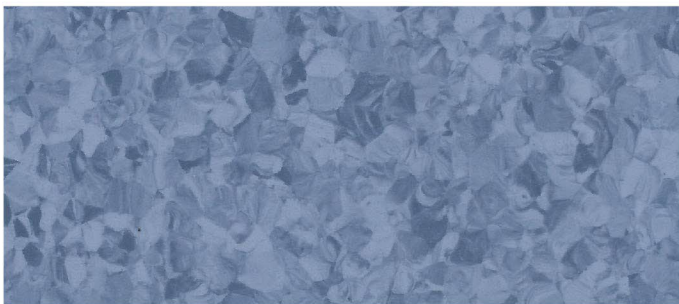

7219

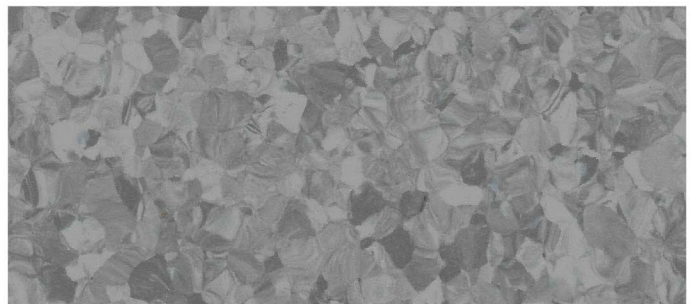

7220 **In Stock**

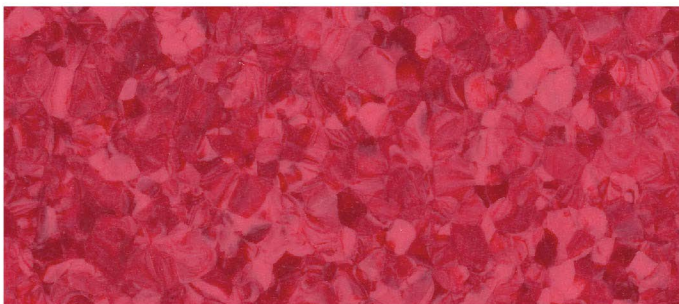


7221



7222 **In Stock**



7223 **In Stock**

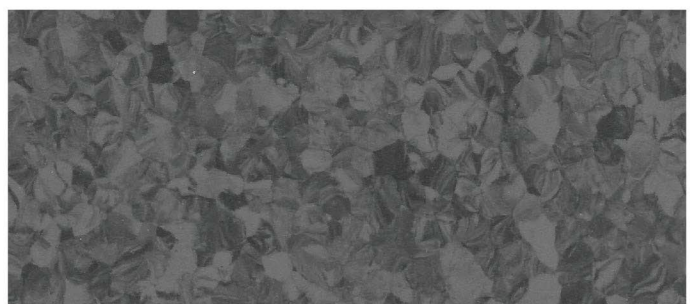

7224

# DESCRIPTION

Thickness	EN428	2mm
Roll Width	EN426	2m
Roll Length	EN426	20m
Weight	EN430	2850g/m <sup>2</sup>

# PERFORMANCES <sup>[1]</sup>

Fire rating	EN 13501-1	Bfl-s1
Abrasion group	EN 649	Group T
Dimension stability	EN 434	0.14%
Curling	EN 434	0.06mm
Residual indentation	EN 433	≈0.04mm
Color fastness	EN 105-B02	EN 105-B02
Slip resistance	ASTM D2047-11 DIN 51130	0.37 R9
Flexibility	EN 435	No crack
Electrical resistance	EN 1815	<2kV
Flammability	ASTM E648	Class I
Smoke density	ASTM E662	<450
Toxicity fumes	BS 6853	R<0.3
TVOC	ISO 16000-9	<10µg/m <sup>3</sup>
Formaldehyde emission	EN 14041	Class E1
Thermal conductivity	EN 14041	0.043W/M·K
PCP	EN 14041	EN 14041
Stain resistance	EN 423	EN 423
Iodine resistance <sup>[2]</sup> *	-	-
Antimicrobial activity <sup>[2]</sup> *	ASTM G 21-13	Excellent <sup>[3]</sup>
Antistatic activity <sup>[2]</sup> *	EN 1081-1998	7.74*10 <sup>7</sup> Ω
Surface treatment		Dual PUR

[1] The test results are provided by SGS and TUV. The data is correct at the time of printing, Cflors as a policy of continuous product and data improvement, it reserves the right to change design and specifications without notice. For latest information, please check our website at [www.cflors.com](http://www.cflors.com)

[2] The three items with "\*" (iodine resistance, antimicrobial activity and antistatic activity) belong to specially customized products. Antimicrobial activity is supported by a kind of harmless organic sterilizing agent which has got the certificate from United States Environmental Protection Agency. Organic sterilizing agent is harmless to human during long-term use, superior to nano-silver. (Nano-silver is also a kind of sterilizing agent but do harm to human body especially the liver.)

[3] According to test report: mycetes (such as Aspergillus Niger, Penicillium Pinophilum, Ayreobasidium Pullulans, Chaetomium Globosum and Trichoderma Virens) and bacterias (such Staphylococcus Aureus, Klebsiella Pneumoniae and Pseudomonas) on the flooring don't breed.

## APPLICATIONS

HEALTH CARE  
HOSPITAL  
EDUCATION  
OFFICE  
RETAIL  
FACTORY



Hudson's Bay Centre  
2 Bloor Street East, Suite 3500  
Toronto, Ontario, Canada | M4W 1Z8  
Tel: +1-416-915-4222  
Fax: +1-416-929-3174  
Email: [info@cflors.com](mailto:info@cflors.com)

Regional Office  
Cflors Middle East FZE  
#109, Emirates Building 1, Street S111  
Jebel Ali Free Zone (South Zone), Dubai, UAE  
Tel: +971-4-884-5200  
Email: [info@cflors.com](mailto:info@cflors.com)